

NNTN4435
 NiMH battery



PMNN4449
 battery



4205638
 belt clip



8505241U11_LG
 7" antenna

*Note: the shorter antenna (not pictured) is not meant to be used directly on the portable radio. It is only for shoulder mics.



PMMN4045
 curly cord
 microphone

WPLN4111 IMPRES Charger



4859974
 leather
 holster



RLN4941
 earpiece

Motorola Recommended Radio Care

Alignment

Motorola recommends that the radio should be serviced once a year. This procedure is done to ensure that the radios operate on the correct frequency.

Cleaning

Remove the battery prior to any cleaning of the radio. Motorola recommends mixing one tablespoon of mild dishwashing detergent to one gallon of water (0.5% solution) to clean the external surfaces of the radio. The solution is to be applied sparingly with a stiff, nonmetallic, short-bristled brush (like a toothbrush), making sure excess detergent does not get entrapped near the connectors, controls or crevices. The radio should be dried thoroughly with a soft, lint-free cloth. If the radio battery contact area has been exposed to water, dry and clean the radio battery contacts before attaching a battery to the radio. If the radio has been exposed to salt water (or salt spray), thoroughly rinse the radio with fresh water. If the radio has been submerged in water, shake the radio briskly so that any water trapped inside the speaker grill and microphone port can be removed. The radio should then be dried per above. Motorola recommends vacuuming the speaker grill to maintain optimal audio performance. Motorola also recommends wearing the radio in a carry case or inside the turnout coat (fire departments) to better protect the radio from prolonged exposure to dirt, debris, heat and/or impacts.

